

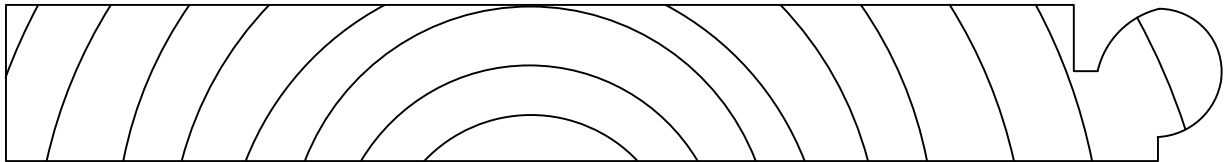
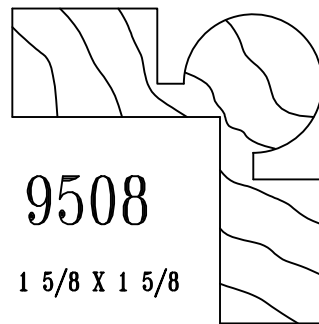
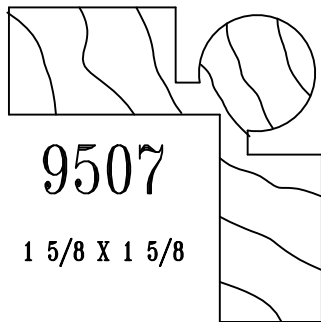
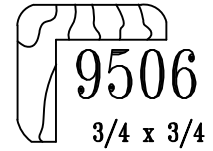
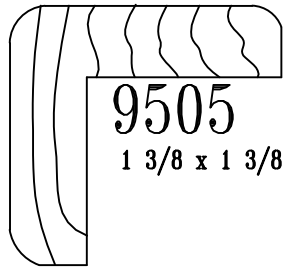
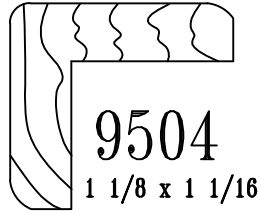



Outside Corner

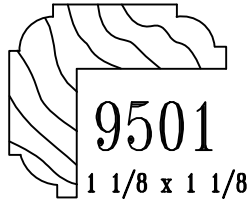


9509
13/16 x 6 5/16

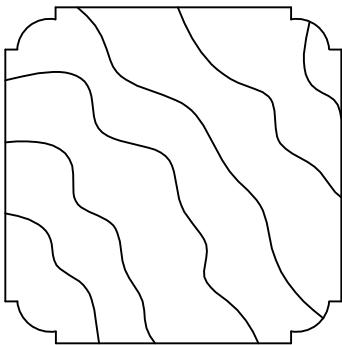


9510
1 3/4 x 1 3/4

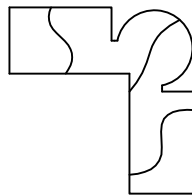


9511
1 x 1

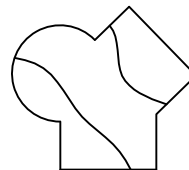

9512
7/8 x 15/16

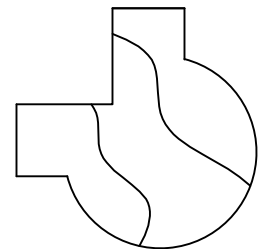


9513
1 1/4 x 1 1/4



Fraser
Millworks


Inside Corner

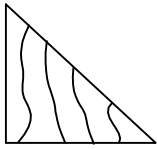


9602
 $3/4 \times 3/4$




9702
 $1/2 \times 1 \ 1/8$

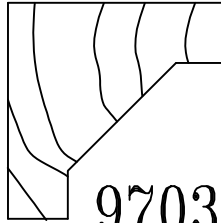


9703
 $1 \ 1/8 \times 1 \ 1/8$

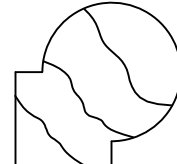


9704
 $7/8 \times 7/8$

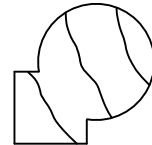

9705
 $3/4 \times 3/4$

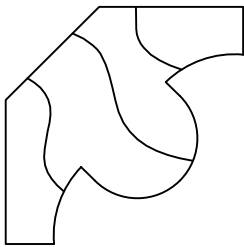

9603
 $15/16 \times 1 \ 3/4$

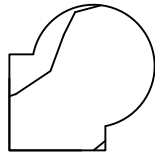

9706
 $3/4 \times 3/4$



Fraser
Millworks