

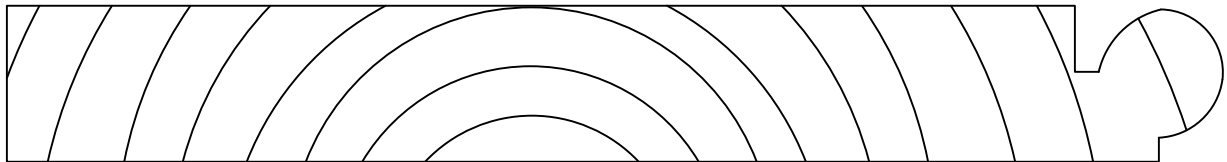
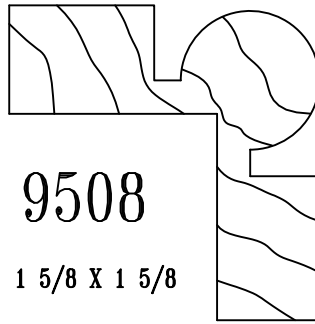
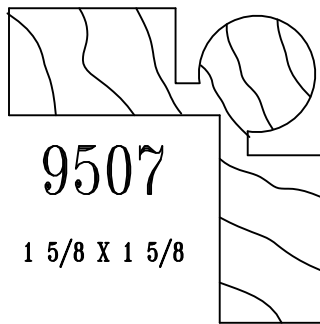
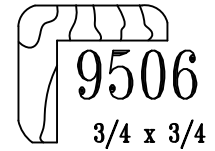
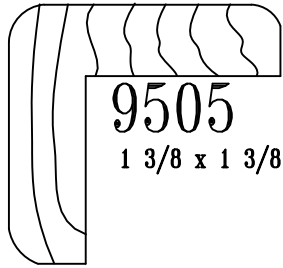
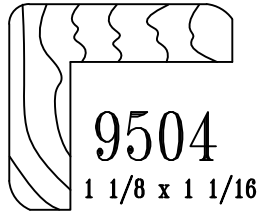
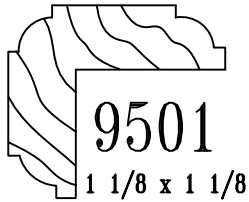
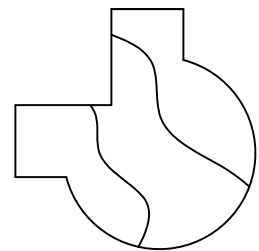
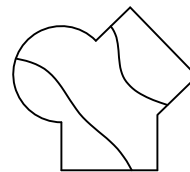


Outside Corner

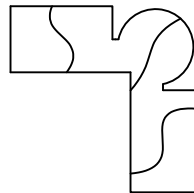


9509
 $\frac{13}{16} \times 6\frac{5}{16}$

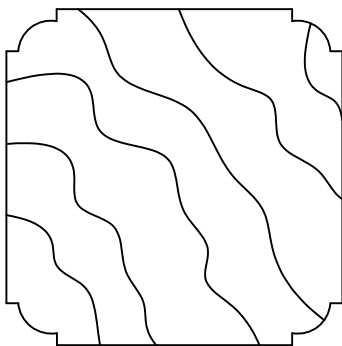


Fraser
Millworks

Outside Corner

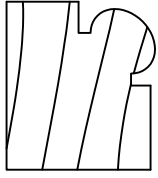

9514
13/16 x 7/8


Inside Corner

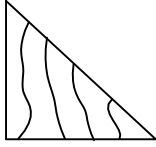


9602
 $3/4 \times 3/4$




9702
 $1/2 \times 1 1/8$

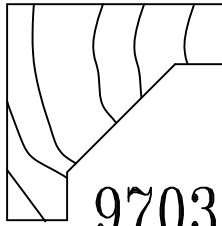


9703
 $1 1/8 \times 1 1/8$

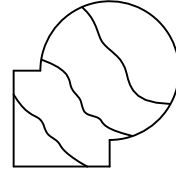


9704
 $7/8 \times 7/8$

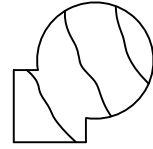


9705
 $3/4 \times 3/4$

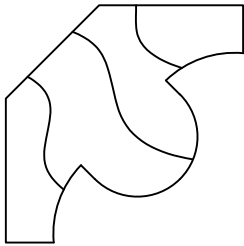


9603
 $15/16 \times 1 3/4$

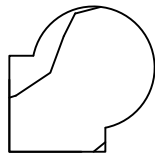

9706
 $3/4 \times 3/4$

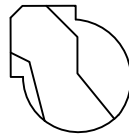


9707
 $9/16 \times 3/4$

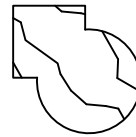


9708
 $11/16 \times 11/16$



9709
 $1/2 \times 1/2$

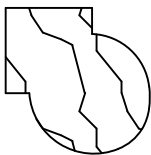

9710
 $3/4 \times 3/4$

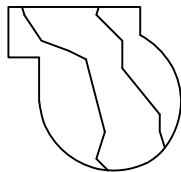

9711
 $7/8 \times 7/8$



Fraser
Millworks