



Door Parts

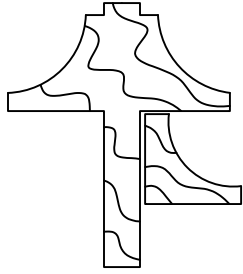


15001

$1 \frac{3}{8} \times 1 \frac{3}{16}$

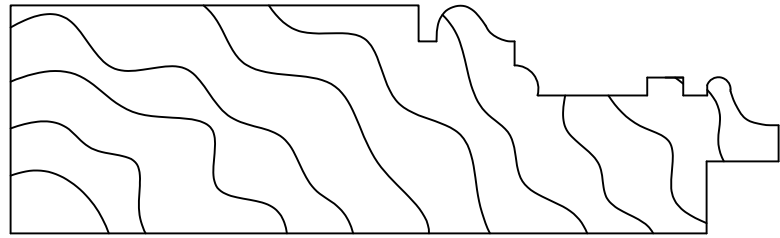


15002

$1 \frac{3}{6} \times 4$

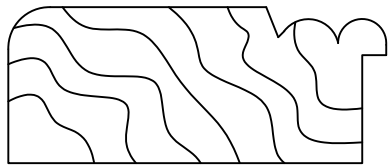


15003

$\frac{13}{16} \times 1 \frac{15}{16}$

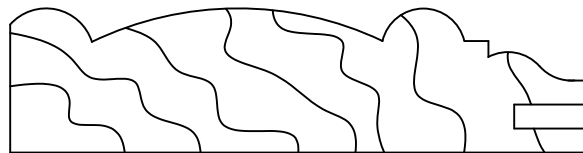


15004

$\frac{3}{4} \times 3$

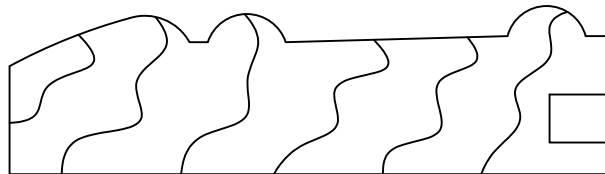


15005

$\frac{7}{8} \times 3 \frac{1}{16}$

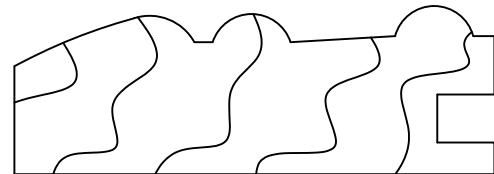


15006

$\frac{7}{8} \times 2 \frac{1}{2}$

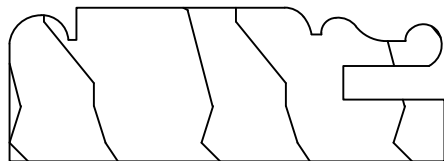


15007

$\frac{13}{16} \times 2 \frac{1}{4}$

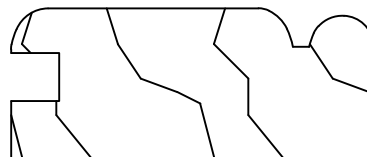


15008

$\frac{3}{4} \times 1 \frac{7}{8}$

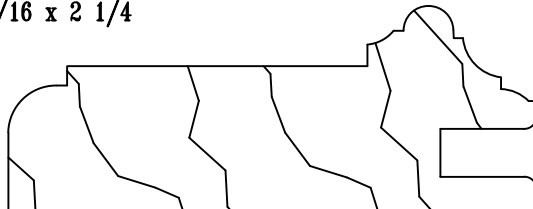

15009


$1 \frac{1}{16} \times 2 \frac{3}{4}$



Fraser
Millworks


Door Stop

10201




$\frac{3}{8}$, $\frac{7}{16}$ or $\frac{1}{2}$ x
specified width

10202




$\frac{3}{8}$, $\frac{7}{16}$ or $\frac{1}{2}$ x
specified width

10203



$\frac{3}{8}$, $\frac{7}{16}$ or $\frac{1}{2}$ x
specified width

10204




$\frac{3}{8}$, $\frac{7}{16}$ or $\frac{1}{2}$ x
specified width

10205




$\frac{3}{8}$, $\frac{7}{16}$ or $\frac{1}{2}$ x
specified width

10206



$\frac{3}{8}$, $\frac{7}{16}$ or $\frac{1}{2}$ x
specified width

10207



$\frac{3}{8}$, $\frac{7}{16}$ or $\frac{1}{2}$ x
specified width

10208



$\frac{3}{8}$, $\frac{7}{16}$ or $\frac{1}{2}$ x
specified width

10209



$\frac{3}{8}$ x specified width

10210



$\frac{1}{2}$ x specified width

10211



$\frac{5}{16}$ x specified width

10212




$\frac{1}{2}$ x specified width

10213



$\frac{1}{2}$ x specified width

10214




$\frac{3}{8}$ x $1 \frac{13}{16}$

10215




$\frac{3}{8}$ x $2 \frac{5}{8}$




Fraser
Millworks


Door Sills

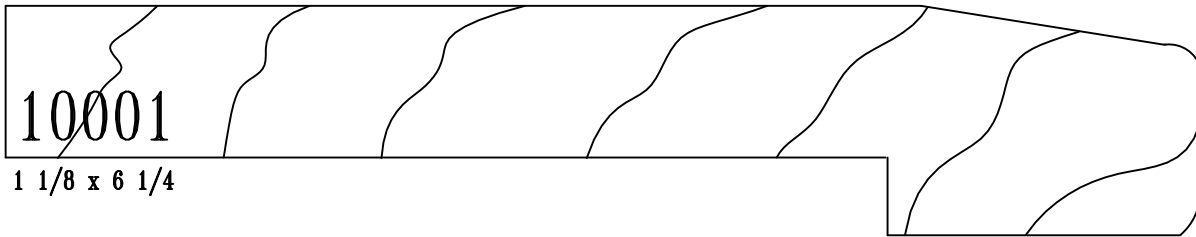


Window Sills

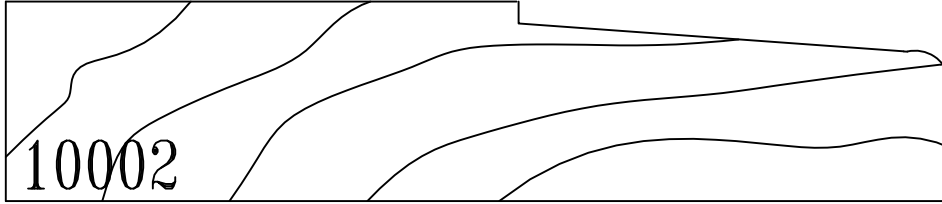


1 x 5

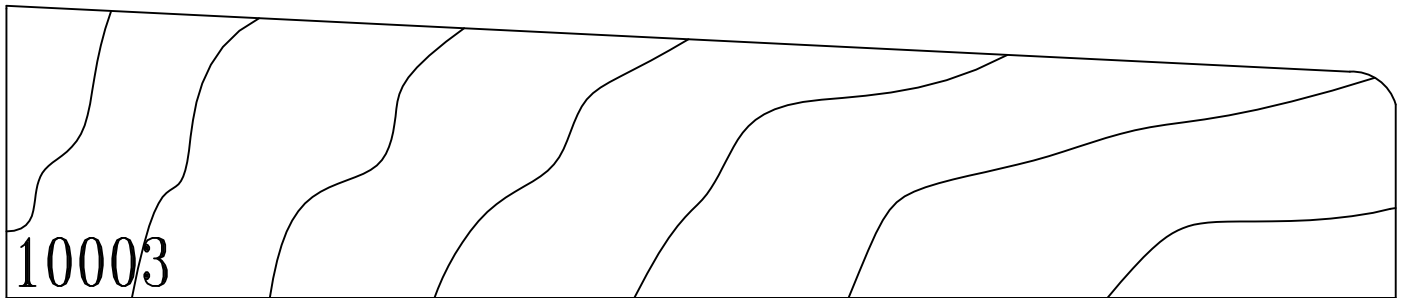

1 1/2 x 7 1/4

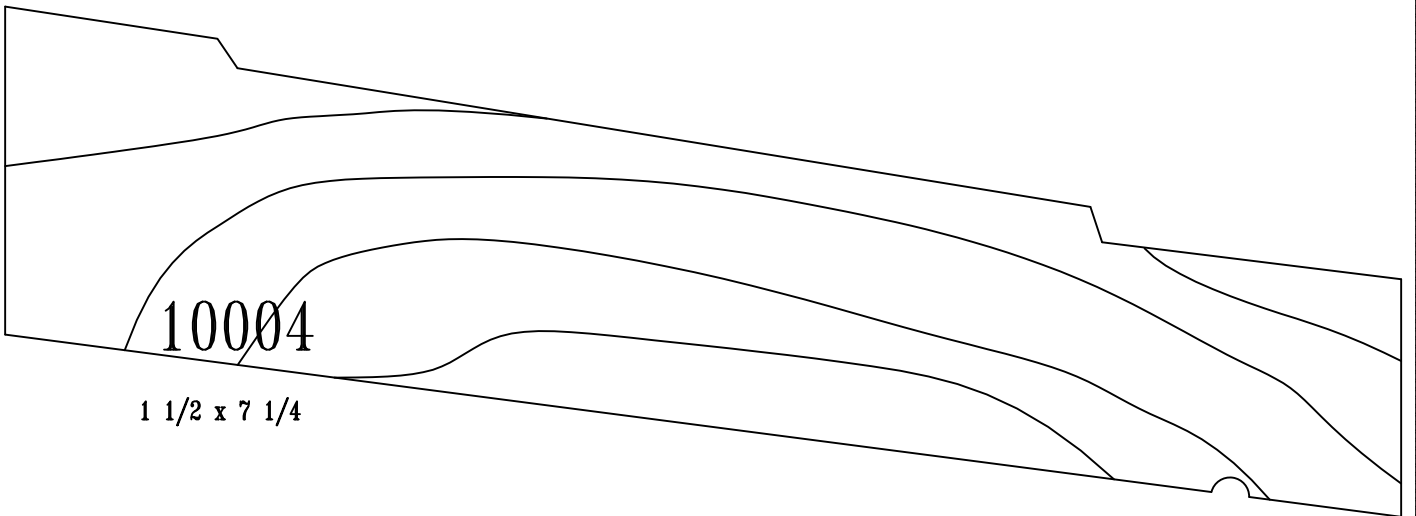

1 1/2 x 7 1/4

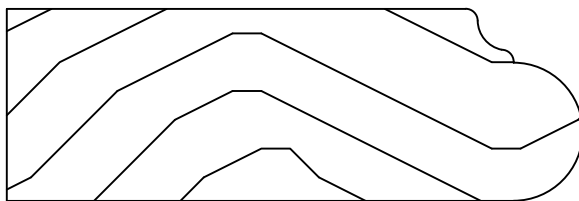


10005
1 x 3




Fraser
Millworks


Window Sills

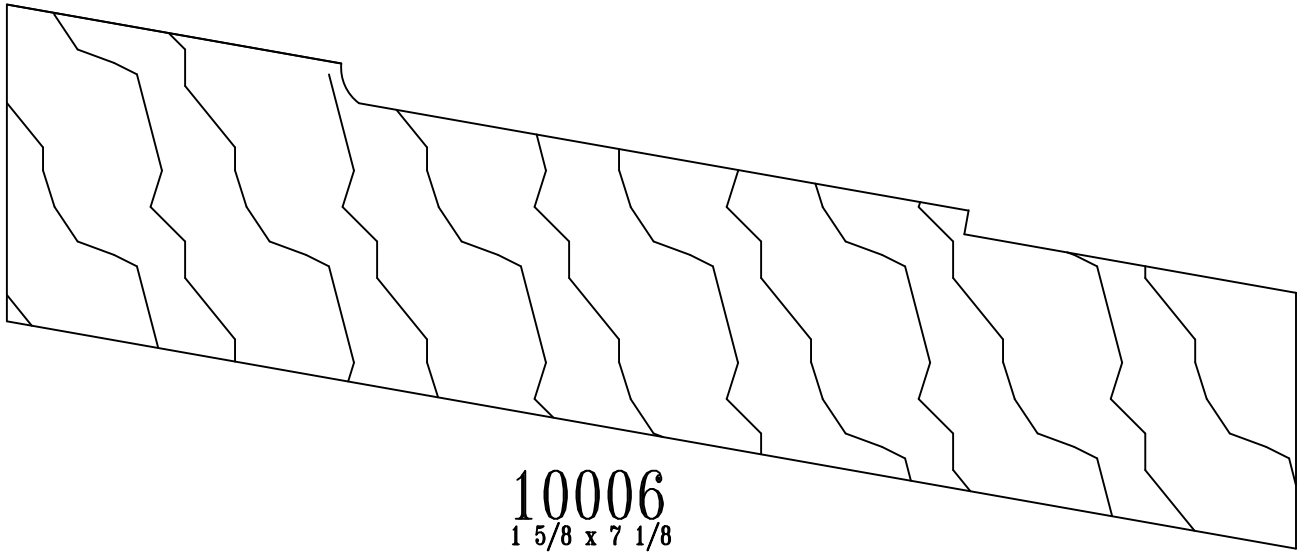


10006
 $1 \frac{5}{8} \times 7 \frac{1}{8}$

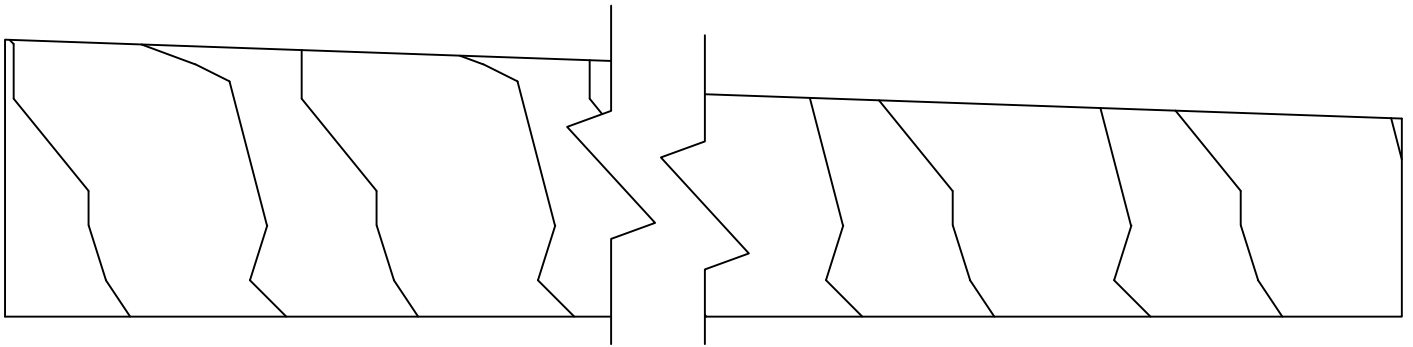

10007
 $1.442 \times 11 \frac{3}{4}$






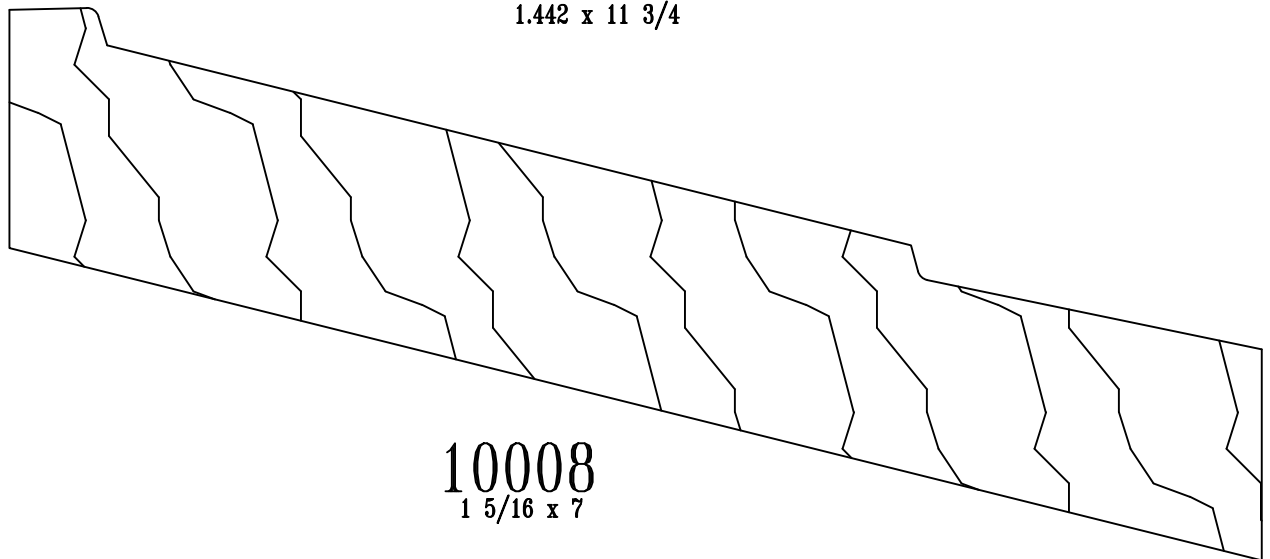


10008
 $1 \frac{5}{16} \times 7$



Fraser
Millworks


Thresholds

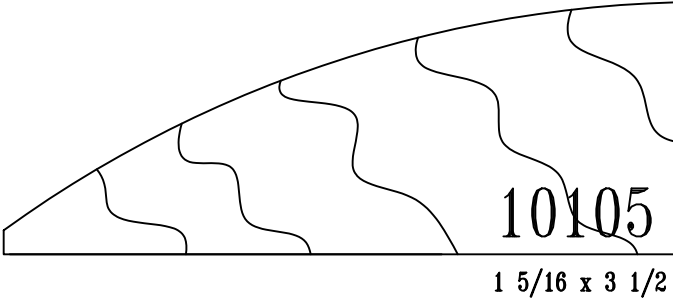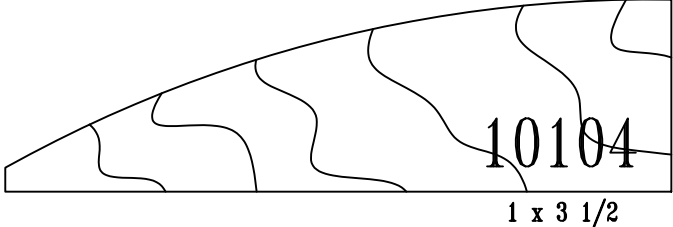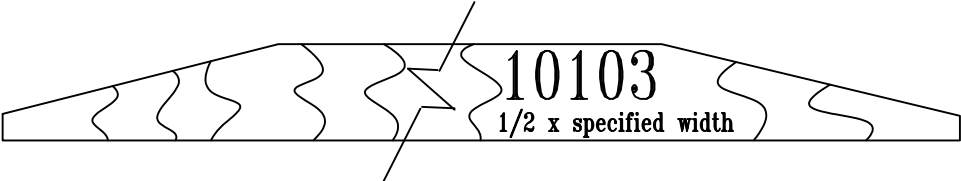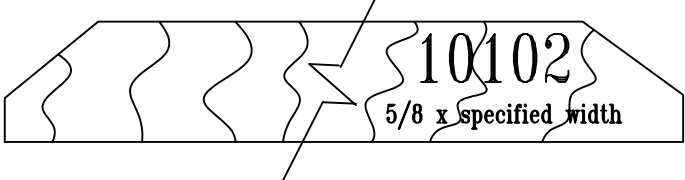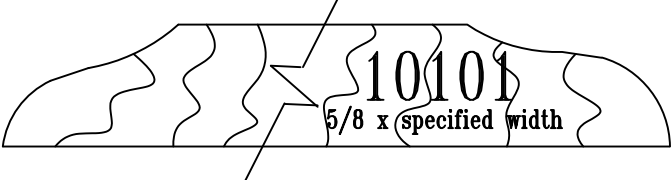


Thresholds



10107
5/16 X 1 1/2

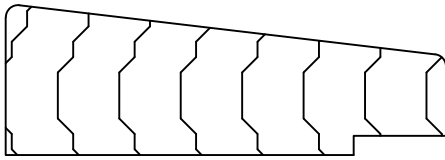


10108
3/4 x 2 5/16



Fraser
Millworks

Window Parts

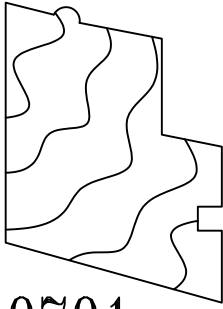


10701

1 1/8 x 1 9/16




10702

1/2 x 7/8



10703

7/16 x 7/8




10704

1/2 x 7/8




10705

7/16 x 11/16




10706

9/16 x 1 3/8




10707

9/64 x 3/4









10708

9/16 x 1 1/8




Fraser
Millworks

Stools

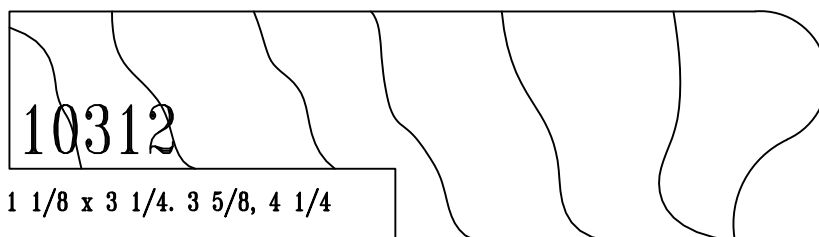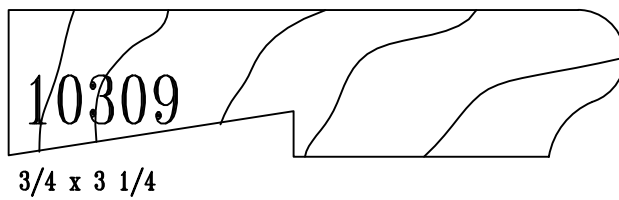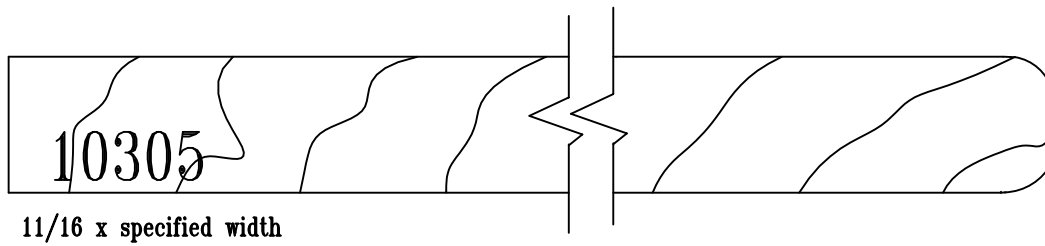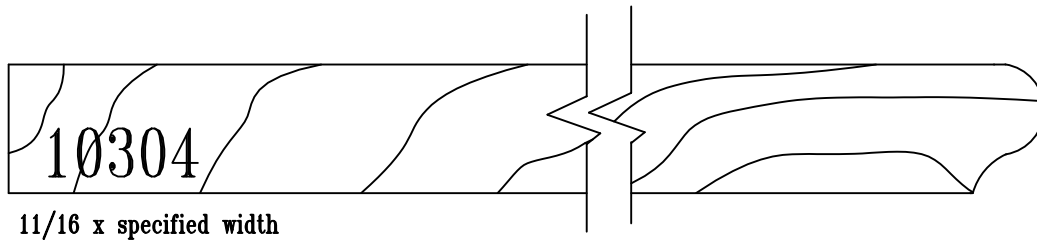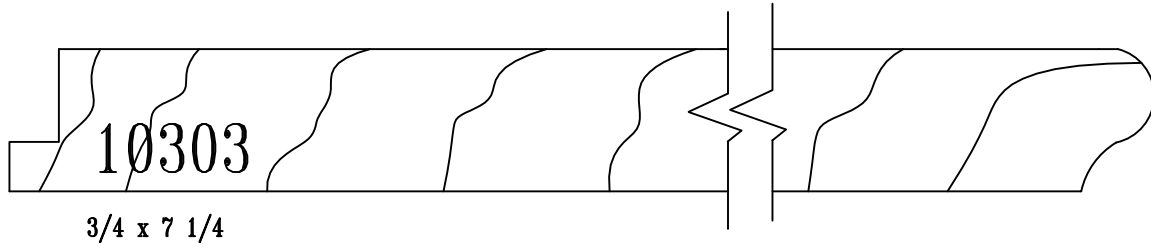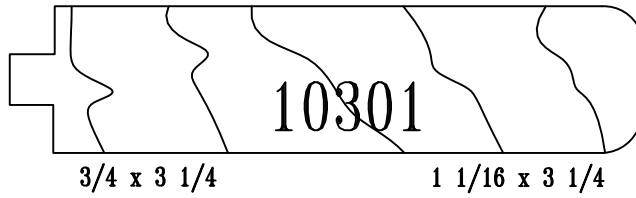


Stools

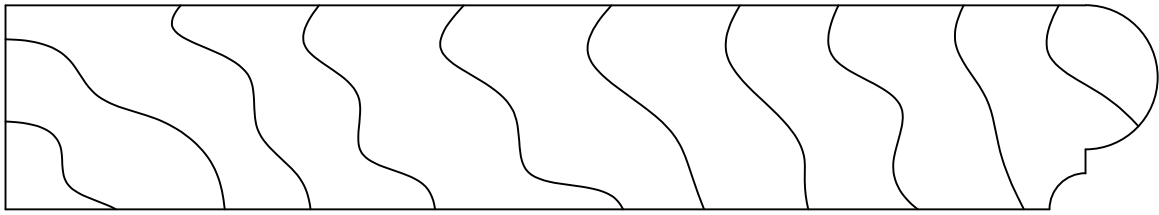


10313

1 1/16 x 6

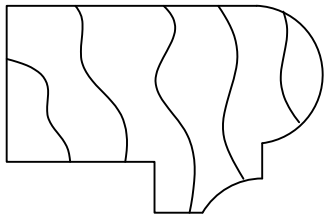


10314

1 1/16 x 1 5/8

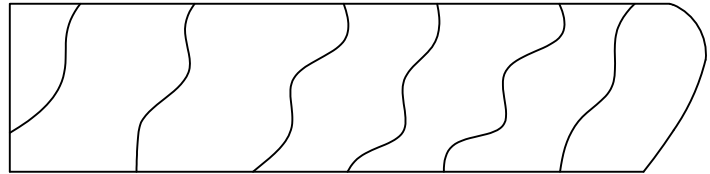


10315

7/8 x 3 5/8

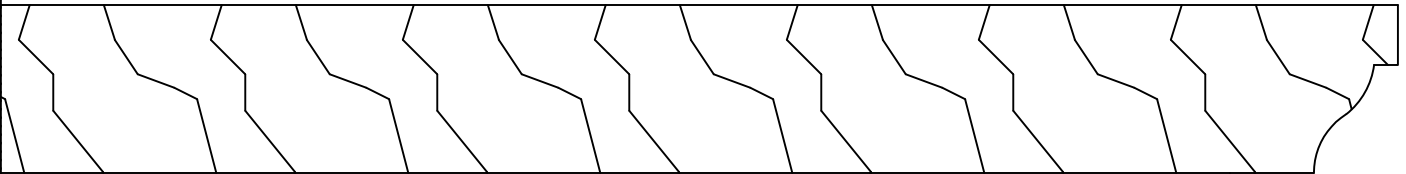

10316

7/8 x spec width

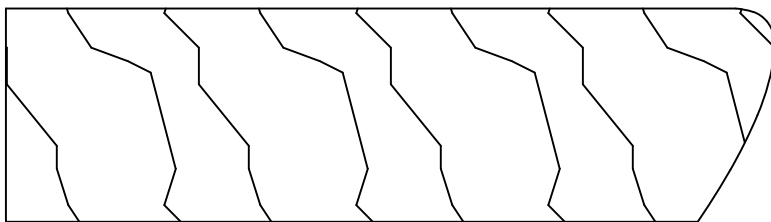


10317

1 1/8 x specified width




Fraser
Millworks


Stools

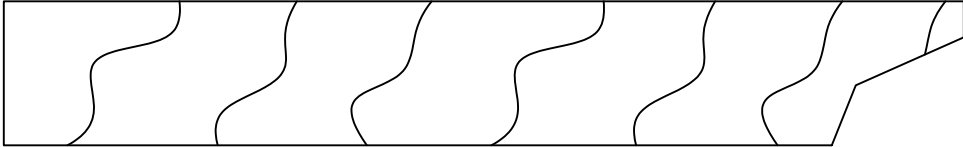

10318
3/4 x 5

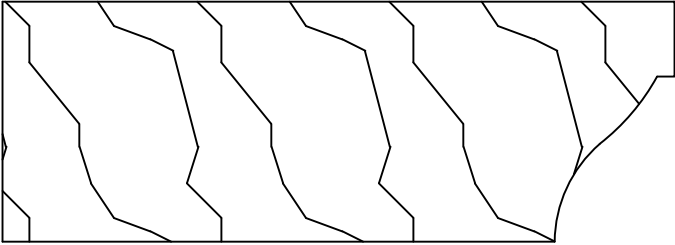

10319
1 1/4 x specified

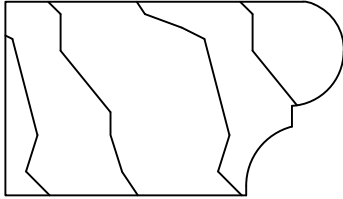

10320
1 x 1 3/4